AUTO

Auto allows any controller button to stay on for continuous action, such as uninterrupted vehicle acceleration, character movement, weapons fire, punches, kicks, etc. This is useful if you get tired of pressing a button for a long period of time.

NOTE: Some games do not allow your character to move while kicking or punching.

How to use Auto

Press and hold any controller button and press AUTO. The AUTO light turns on whenever the Auto feature is active.

1. Press and hold any controller button and press AUTO to add the Auto feature. Repeat to remove the Auto feature.

A good time to add Auto to a controller button is at the very beginning of games or during practice screens. During game play it may be easier to pause the game while adding Auto.

After you add Auto to a controller button, you can press that button for continuous action. The action will stay on until you press the controller button again. Each time you press the controller button you turn the Auto action on or off.

Auto Example

Here's an example from Blaster Master Auto for continuous fire:

Press and hold C

Now when you press C once, Jason or S ly fire. When you press C again, the firin time, and the continuous firing resumes. add Turbo to this auto example.

How to add Turbo to Auto

Turbo may have to be added to Auto in action.

Press and ho action button

Press and ho button and pr

Now when you press the controller actio continue automatically at turbo speed.

Any controller button used with Auto wil and PRO THRASH™ settings. You can u of controller buttons at the same time.

How to remove Auto

Press and hold the controller button and ton should function normally and the AU

SLOW MOTION

Slow Motion is especially useful in difficult fast-moving games. When you slow down the action, you have a lot more time to plan your next move. With the Slow Motion feature you can make your own Slow Motion button to use when playing difficult parts of a game.

How to make a Slow Motion button

Press and hold the controller Start button and press TURBO once. Press and hold the Start button and press AUTO. The TURBO light and AUTO light will come on.

To set the Slow Motion rate press and hold Start button and repeatedly press SLOW until you reach the speed you want. The lights will flash at a slower rate each time SLOW is pressed.

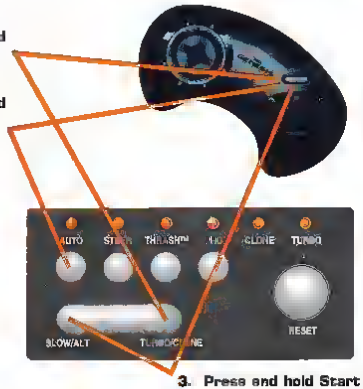

3. Press and hold Start and press SLOW repeatedly to slow the rate of Slow Motion.

You cannot pause a game and then create a Slow Motion button. So, a good time to make a Slow Motion button is at the very beginning of games or during practice screens.

SLOW MOTION

Slow Motion example

Here's an example from Sonic the Hedgehog 2® showing how you can slow down the game.

Press and hold Start and press TURBO

Press and hold Start and press AUTO

Press and hold Start and press SLOW repeatedly to reduce speed

Now pressing Start will turn Slow Motion on or off.

How to remove Slow Motion

To remove Slow Motion from the Start button, press RESET *once* and then press Start.

The Slow Motion feature does not work with all games. The button holding the Slow Motion feature must also function as the pause button. In games where the pause function is also used to display other screens such as menus, the Slow Motion feature will not work.

RESET

Use Reset to undo changes you've made to controller buttons. You can change a single controller button back to it's original setting, or you can reset all controller buttons at the same time.

If you make a mistake while changing a controller button, press RESET once to cancel the change and return that button to it's original setting.

How to reset a *single* controller button

Press the RESET button once– all the lights will flash.

Press the controller button to tell POWER PLUG™ which button will be reset.

This will undo any POWER PLUG action (Turbo, Auto, Clone, THRASH™, and PRO THRASH™) and will return the controller button to its original setting.

How to reset *all* controller buttons

Press the RESET button once– all the lights will flash.

Press RESET again to tell POWER PLUG to reset all controller buttons.

This will reset all controller buttons at the same time, only Power Steering will stay on.

Resetting all buttons by pressing RESET twice is a frequently used feature

POWER STEERING

Power Steering gives you smooth control for precise maneuvering. Power Steering is especially useful in driving, flying and some sports games.

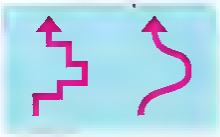

How to use Power Steering

Simply press STEER anytime you want Power Steering. The STEER light will come on.

Pressing STEER automatically gives your direction pad Power Steering.

1. Simply press STEER anytime you want Power Steering

Power Steering examples

G-Loc®, Jaguar XJ220™, Outrun 2019™, NHLPA Hockey®, Battletoads™* and World Trophy Soccer™.

How to remove Power Steering feature

To turn Power Steering off, press STEER again. The STEER light will go off.

*Only turn Power Steering **ON** when playing a game and **OFF** when selecting menus or options*

*Power Steering will make your Battletoad always run instead of walk

THRASH

THRASH is a special combination move already contained in the POWER PLUG™. Some games, like Street Fighter II™, use special combination moves called thrashes for their characters. Most of these special moves are difficult to learn, but once mastered give that character super human abilities. The POWER PLUG lets you put a combination move into a single button! For instance, in Street Fighter II™ it takes four moves to make Ryu throw a fireball. With Thrash you can throw a fireball by pushing just one button!

Always choose a THRASH the same way—no matter which THRASH you want to use

- There are ten thrashes stored in the POWER PLUG
  See tables on pages 19, 20 and 21
- Any button on your controller can hold a THRASH. Note that the controller button which you select to hold the THRASH will lose it's original function until the THRASH is removed
- To complete each THRASH, you select an appropriate attack button (shoot for a shooting THRASH, punch for a punching THRASH or kick for a kicking THRASH)

If you make a mistake while setting up a THRASH, you can cancel the THRASH by pressing RESET once before you choose an attack button

How to use THRASH

Press the THRASH Button one or more times to select the THRASH you want. Notice that the lights are used to count in sequence from left to right. For example, if you want THRASH #5, press the THRASH button five times. The lights on the POWER PLUG will help you keep track of which THRASH you are selecting.

Press any controller button you want to hold the THRASH. The THRASH light will begin blinking. Usually it's best to hold the THRASH in a button that is rarely used.

Press an attack button, such as a shoot, punch, or kick, to complete the THRASH. The THRASH light will go off. You can even press two or three attack buttons at once!

Some thrashes are programmed with Turbo. In these cases the TURBO light will also come on when the THRASH is activated.

A good time to choose THRASH is at the very beginning of games or during practice screens. During game play it may be easier to pause the game before choosing a THRASH.

THRASH examples

This Street Fighter II™ example shows you how to set-up a THRASH that throws the highest Dragon Punch. This is useful when Ken or Ryu is fighting a character such as Vega. When Vega jumps off the fence to attack, you can hit him with this THRASH at the height of his jump. Then you can hit him again when he lands.

Press THRASH twice to choose THRASH #2, the Dragon Punch

Press A (jab) to hold the THRASH.

Press C (fierce) for the attack button to complete the THRASH.

Now whenever you press **and hold** A (jab), your character throws the highest Dragon Punch.

When you want a character to do a THRASH, you must hold down the controller button that holds the THRASH all the way through the end of the move.

The next Street Fighter II™ example shows you how to select a THRASH that throws the lowest Dragon Punch. This is useful because a high Dragon Punch sometimes leaves your character vulnerable to counter attack.

Press the THRASH button twice to choose THRASH #2, the Dragon Punch.

Press B (punch) to hold the THRASH.

Press A (jab) for the attack button to complete the THRASH.

Now whenever you press **and hold** B (punch), your character throws the lowest Dragon Punch.

How to remove THRASH

To remove a THRASH from a controller button, press RESET once and then press that controller button.

Tips on Street Fighter II™

Here are a few tips on using Street Fighter II™ with the POWER PLUG™.

- When you choose a controller button to hold the THRASH, you should use your weakest attack buttons—that way you preserve your strongest attack buttons for further use. Buttons like A (short kick/jab) are best for holding the THRASH. Do not use Start to hold a THRASH.

When using a three button controller do not use Start to hold a THRASH.

- When you choose an attack button to complete the THRASH, you should use the more powerful punch or kick buttons to make the most powerful THRASH attack.
- Generally in Street Fighter II™, using weaker versus stronger attack buttons changes the speed, height or length of the THRASH.
- If you choose the "V.S. Battle" option on the game menu screen the computer won't attack while you experiment with THRASH.

THRASH Guide to Street Fighter II™

Move	THRASH	Attack buttons	Comment
Ryu & Ken			
Fireball	#1	A (jab)	Shortest distance
		C (fierce)	Longest distance
Dragon Punch	#2	C (roundhouse)	Highest Dragon Punch
Hurricane Kick	#3	A (short)	Kick lasts 2 rotations
		C (roundhouse)	Kick lasts 4 rotations
Chun Li			
Fireball*	#6	A (jab)	Slowest fireball
		C (fierce)	Fastest fireball
Hurricane Kick	#5	C (roundhouse)	Kick lasts 2 rotations
		A (short)	Kick lasts 4 rotations
Zangief			
Spinning Pile Driver	#7	A (jab)	A very powerful move! Get very close to your opponent before using.
Dhalsim			
Yoga Teleport	#2	any punch button	
Yoga Fire*	#1	C (fierce)	Fastest Yoga Fire
Yoga Flame*	#6	Any Punch	
Guile			
Sonic Boom*	#4	C (fierce)	Fastest Sonic Boom
Flash Kick	#5	A (short)	Lowest Flash Kick
		C (roundhouse)	Highest Flash Kick
Blanka			
Vertical Ball	#5	A (short)	Shortest distance
		C (roundhouse)	Longest distance
Rolling Attack*	#4	C (fierce)	Longest Rolling Attack
		A (jab)	Shortest Attack
E. Honda			
Sumo Head Butt*	#4	C (fierce)	Longest Head Butt
		A (jab)	Shortest Head Butt

SEGA GENESIS

ITEM NO. 1276

POWER PLUG™

OWNER'S MANUAL

TYCO

FEATURES:

• THRASH™ • PRO THRASH™ • Power Steering
• Auto Fire • Variable Turbo • Clone

Licensed by Sega Enterprises Ltd for use with the SEGA™ GENESIS™ system

THRASH guide to Street Fighter II™ (cont'd)

Move	THRASH		Attack buttons	Comment
E. Honda				
Super Sumo Splash	#5	● ● ● ● ✱ ●	A (short) C (roundhouse)	Shortest Splash Longest distance
Balrog				
Dash Punch*	#4	● ● ● ✱ ● ●	any punch button any kick button	A straight punch An uppercut punch
Vega				
Claw Dive*	#5	● ● ● ● ✱ ●	any kick button	
Wall Leap	#5	● ● ● ● ✱ ●	any kick button	
Claw Roll	#4	● ● ● ✱ ● ●	A (jab) C (fierce)	Slower and shorter Faster and farther
Sagat				
Tiger Shot (high)	#1	✱ ● ● ● ● ●	A (jab) C (fierce)	Slowest Tiger Shot Fastest Tiger Shot
Tiger Shot (low)	#1	✱ ● ● ● ● ●	A (short) C (roundhouse)	Slowest Tiger Shot Fastest Tiger Shot
Tiger Uppercut	#2	● ✱ ● ● ● ●	A (jab) C (fierce)	Lowest Tiger Uppercut Highest Tiger Uppercut
Tiger Knee	#10	✱ ● ● ● ✱ ●	any kick button	
M. Bison				
Psycho Crusher*	#4	● ● ● ✱ ● ●	A (jab) C (fierce)	Shortest Distance Longest Distance
Scissor Kick*	#4	● ● ● ✱ ● ●	A (short) C (roundhouse)	
Head Stomp	#5	● ● ● ● ✱ ●	A (short) C (roundhouse)	Slowest Fastest

When you want a character to do a THRASH, you must hold down the controller button that holds the THRASH all the way through the end of the move.

**When using the THRASH with some attacks, the POWER PLUG™ needs to know which direction you are facing. Tap the direction pad in the direction of your opponent before you launch one of these THRASH attacks.*

Thrashes for other games

Thrashes #8 and #9 are powerful attacks that work on a wide variety of fighting games like Battletoads™ and X-Men®. In general, if you have a side-scrolling platform game where either the A, B, C button makes your character attack (shoot, punch, or kick) these Thrashes will give you an extra special attack.

General Fighting THRASH Example

Here is an example using THRASH #9 with Universal Soldier™.

Press THRASH nine times to choose THRASH #9, the Two-way THRASH.

Press Start to hold the THRASH. Start is good because you don't need it very often.

Press A (shoot) to complete the THRASH.

Now when you press and hold the Start button, your character shoots left and right at super human speeds! Use Auto with this button for hands-free automatic assault.

General Fighting Thrashes

Move	THRASH		Comment
Turn Around and Attack	#8	✱ ● ✱ ● ● ●	Turns character in opposite direction, attacks, punches or kicks one time, then turns back to original direction
Two-Way THRASH	#9	✱ ● ● ✱ ● ●	Very quickly turns character left and attacks, then right and attacks

The general fighting thrashes work on a variety of games. Here are just a few examples for you to try: Battletoads™, Universal Soldier™, Turtles: The Hyperstone Heist™, Mercs™, Technoclash™, Cool Spot™, X-Men®, and Batman™ Returns.

For THRASH guide to Streets of Rage 2™ see page 41

ALT

Alt allows you to switch back and forth between the normal function of a button and the POWER PLUG™ feature you put onto that button. For instance, when you are using THRASH™ you'll want to assign the THRASH move to a button that is rarely used. But if you are playing a game where all the buttons are frequently used, then you should make an Alt button.

How to make an Alt button

Always make an Alt button the same way. Adjust your Turbo, Auto and other settings before adding the ALT feature.

Press PRO to tell the POWER PLUG you want to program something. The PRO light will blink.

Press ALT to tell the POWER PLUG you're going to make an Alt button. The PRO, THRASH, and CLONE lights will blink.

Press any controller button (often Start) and it becomes the Alt button.

Now when you press and hold the Alt button, all other buttons will use the POWER PLUG settings assigned to them. When you are not pressing the Alt button, all other buttons function normally as if they had no POWER PLUG settings.

If you want to use the normal function of the Alt button press the Alt button twice quickly. For example, if Start becomes the Alt button, and Start is used to pause the game you need to press Start twice quickly in order to pause the game.

Alt example

In Streets of Rage 2™ there are not any unused buttons to replace with a THRASH, so this example shows you how to solve this problem with an Alt button. First, select the Axel character and set up the THRASH.

Press THRASH once to choose THRASH #1. THRASH #1 is Axel's Grand Upper attack.

B will hold the THRASH.

This is the attack button to complete the THRASH which gives you the Grand Upper.

Now when you press B, Axel will do the Grand Upper. Next create the Alt button.

This tells the POWER PLUG™ you want to program something.

This tells the POWER PLUG you're going to make an Alt button.

This makes Start the Alt button.

Now when you press and hold Start and press B, Axel will attack with a Grand Upper. If you only press B, Axel will attack with a normal punch.

How to remove Alt

You can remove Alt from a button without losing other POWER PLUG settings. To do this, press PRO, then ALT and then RESET.

PRECAUTIONS AND MAINTENANCE

DO NOT ...p-on or otherwise abuse ...e POWER P...UG

DO NOT expose t... or sto...e the POWER PLUG t... extreme ...
...ions

DO NOT expose to wet ...ass or dirt. Doing so may cause dam...
PLUG and/or yo... game system

NEVER disassemble the POWER PLUG

...e ...al connecting. **DO NOT** pull from the cord. Always ... ...
...the plastic p...ug.

...EAN: S...mply ...se a damp cloth. **DO NOT** use an...

This product generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B digital device in accordance with the specifications of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient the receiving antenna; relocate the product with respect to the receiver; move the product away from the receiver; plug the product into a different outlet so that product and receiver are on different branch circuits. If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

The titles or names of the individual games noted are trademarks of the respective owners, and are not affiliated in any way with Tyco Industries, Inc.

LICENSED BY SEGA OF AMERICA, INC. FOR PLAY ON THE SEGA™ GENESIS™ SYSTEM

SEGA, GENESIS, AND THE SEGA SEAL OF QUALITY ARE TRADEMARKS OF SEGA ENTERPRISES, LTD. ALL RIGHTS RESERVED

POWER PLUG, THRASH and PRO THRASH are trademarks of Tyco Industries, Inc.

© 1993 Tyco Industries, Inc. Mount Laurel, NJ 08054. All rights reserved. Patent Pending

WELCOME TO POWER PLUG™

Congratulations! You now own the ultimate video game weapon...the POWER PLUG. Use the POWER PLUG to supercharge any video game controller and you'll increase your skill on many of your favorite video games. But first you need to understand how to install and operate the POWER PLUG. This manual shows you, step-by-step, how to squeeze every ounce of power from the POWER PLUG. Read it carefully and soon you'll be playing at the ultimate level of power!

TABLE OF CONTENTS

OVERVIEW 4
INSTALLATION 6
TURBO 8
AUTO 10
SLOW MOTION 12
RESET 14
POWER STEERING 15
THRASH™ 16
- Thrashes for Street Fighter II™
- Thrashes for Other Games

ALT 22
PRO THRASH™ 24
- How to Create a Combination Move
- How to Create a Directional Combination Move (Advanced)
- PRO THRASHES for Other Games (Advanced)
- How to move A Controller Button

ADVANCED (Combining Features) 34
- TURBO and THRASH
- TURBO and PRO THRASH
- AUTO and THRASH OR PRO THRASH

CLONE 37
HAVING TROUBLE? 38
APPENDIX 41
- Thrashes for Streets of Rage 2™

PRO THRASH

PRO THRASH will record any combination of moves you make, and then save them in a single controller button. This is similar to THRASH™, only here you create your own personal THRASH! PRO THRASH is the most flexible and powerful POWER PLUG™ feature so it's useful for all types of games. For instance, in John Madden Football™ you can create a PRO THRASH for breaking tackles! Use your imagination and you'll come up with many ways to use PRO THRASH for your favorite games.

PRO THRASH is always used in the same way– simply show the POWER PLUG what to do.

How to use PRO THRASH

Press PRO to tell the POWER PLUG you want to record a combination move. Notice that the PRO light will begin blinking.

Press any controller button to hold your combination move.

Create the sequence of moves you want recorded.

Press PRO again to tell the POWER PLUG you are done. The PRO light then goes off.

POWER PLUG records your moves exactly as you enter them–including the time between moves. Make sure you enter your moves as quickly as you would normally play them, otherwise your combination moves may run too slowly during game play. If the move is still too slow try adding Turbo. See page 35 for "Adding TURBO to PRO THRASH"

How to remove PRO THRASH

If you make a mistake while creating your PRO THRASH, press RESET once and then start again. To remove a PRO THRASH that has already been saved in a controller button, press RESET once and then press that controller button.

PRO THRASH example: Create and record a combination move

This example shows you how to record a combination move into a single controller button for Sonic the Hedgehog 2®. If you wanted Sonic to move right, jump, move left, and jump again, and end up facing right, do the following:

Press PRO to tell the POWER PLUG™ you want to record a PRO THRASH.

Press B, which is the button that will hold the PRO THRASH.

Enter the combination you want recorded:

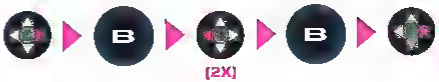

Press PRO to tell the POWER PLUG you are done.

Now when you press and hold B, Sonic will do the move just recorded– move right, jump, move left twice, jump and turn right. If you use your imagination you'll come up with many ways to use PRO THRASH. To get started, pages 28 - 32 list useful PRO THRASH examples for many favorite games.

If the POWER PLUG beeps several times while recording a PRO THRASH, the POWER PLUG has run out of memory. Try resetting the button or recording a shorter PRO THRASH (maximum 17 button presses).

PRO THRASH example: Create and record a directional combination move

Sometimes when you create a PRO THRASH it may work in only one direction. That's because when you create a PRO THRASH move, you are facing in one direction. The POWER PLUG™ lets you record a directional combination move, so the PRO THRASH move will work in either direction.

You create a directional combination move the same way in any kind of game.

- Pro tells POWER PLUG you want to record your own combination move.
- Select any button on your controller to hold your new combination move.
- Create the sequence of moves you want recorded
- Pressing THRASH™ tells POWER PLUG this is a directional combination move
- The direction arrow tells POWER PLUG the direction your character was facing when you started the move.

When you use a directional PRO THRASH attack during a game, remember to tap once in the direction you want to attack before launching the attack.

Here's an example of a directional combination move. In Mortal Kombat®, the Scorpion character can throw the Van Dam Spear to the right or left. To make this attack to the right, you tap the left direction arrow twice and press A. To make this attack to the left, you tap the right direction arrow twice and press A.

Press PRO to tell the POWER PLUG™ you are about to create a PRO THRASH.

Press B, which is the button that will hold the PRO THRASH.

(EX)

Press the direction pad to the left twice.

Press A and Scorpion will throw the Van Dam Spear.

Press THRASH™. This tells the POWER PLUG the move is directional.

Press the direction pad to the right to tell the POWER PLUG that you were facing right when you started the move.

Now whenever you want Scorpion to throw a Van Dam Spear, simply tap the direction pad in the direction you want to throw the spear, then press and hold B.

When using the six button controller with games designed for three button play the extra controller buttons can be used to hold POWER PLUG features.

Other PRO THRASH Examples

Most of the following examples require the use of an Alt button. See page 22 "How to make an Alt button."

Alien Storm®

This PRO THRASH gives you the jumping attack. Normally you need to run, then jump, then kick while in the air to do this move. Note that this PRO THRASH recognizes your direction. The ALT function is used with this PRO THRASH.

Facing right...PRO, C, ▶, ▶, C, B, THRASH™, ▶; then create Alt with PRO, ALT, Start

Amazing Tennis®

POWER PLUG™ can help you create a perfect high velocity serve. Timing is crucial when you create this PRO THRASH and it will probably take several attempts to get it down just right. Normally the player hits B or C to toss the serve and at the perfect height press B (hard) or C (soft) to swing. Use this PRO THRASH for a perfect hard serve. The ALT function is used with this PRO THRASH.

PRO, B, B, wait until desired height achieved, B, PRO; then create Alt with PRO, ALT, Start

Atomic Runner™

Sometimes it's useful to shoot forward at three angles at once. This creates a continuous stream of bullets shooting in front of you at three angles. If you apply Turbo to this combination move, you should vary the Turbo speed down from the maximum speed. The ALT function is used with this PRO THRASH.

PRO, B, ▼+B, B, ▶+▲+B, PRO; then create Alt with PRO, ALT, Start

Battletoads™

A very useful attack is the running shoulder butt. To do this move normally, you must begin running right (or left) and then press B just before running into the enemy. The following PRO THRASH makes this attack automatic. If Turbo is used, it must be adjusted downwards to be effective. Note that this PRO THRASH recognizes your direction. The ALT function is used with this PRO THRASH.

Facing right...PRO, B, ▶ twice quickly, B, THRASH™, ▶; then create Alt with PRO, ALT, Start

Castle of Illusion™

Putting the "jump-sit down attack" sequence into a single button helps prevent you from getting hurt when you attack. Normally you need Mickey to jump (C) then "sit down" on top of an enemy (C again) to dispatch it. If you forget to press C the second time (and simply land on top of the opponent) you get hurt. Since C is "jump", it's hard to get used to it being the "sit down" button too. This PRO THRASH puts the jump and sit down move in one button. The PRO THRASH button can be either A or B; we recommend using A.

PRO, A, C, C, PRO

California Games®

Here's a simple way to quickly speed up the roller skater in the roller skating event. Normally you have to rapidly press D-Up, D-Down, to speed up. Turbo this PRO THRASH for best results.

PRO, C, ▲ then ▼ twice quickly, PRO

Cyborg Justice™

There are many Cyborg Justice special attacks that can be used in PRO THRASH, and here's just one example. Repeating power kick/dismembering attack. This PRO THRASH gives your robot a powerful kick and when you are very close to the opposing robot, the same PRO THRASH will rip off a body part from the opposing robot. It's also great to use against a collapsed robot opponent. This PRO THRASH is easiest to create while in the 2-player duel mode. Also, if Turbo is used it must be carefully adjusted to the correct speed. Note that this PRO THRASH recognizes your direction. The ALT function is used with this PRO THRASH.

Facing right...PRO, A, ◀+A, ◀+A, THRASH™, ▶; then create Alt with PRO, ALT, Start

Fatal Fury®

There are many Fatal Fury special attacks that can be used in PRO THRASH, and here's one example. Terry Bogard's power wave. Note that this PRO THRASH recognizes your direction. The ALT function is used with this PRO THRASH.

Facing right...PRO, A, ▼, ▼+▶, ▶+A, THRASH™, ▶; then create Alt with PRO, ALT, Start

Jennifer Capriati Tennis™

POWER PLUG™ can help you create a perfect high velocity serve. Timing is crucial when the player creates this PRO THRASH and it will probably take several attempts to get it right. Normally the player presses A or B or C to toss the serve and at the perfect height hits A (slice), B (flat) or C (drive) to swing. The ALT function is used with this PRO THRASH.

PRO, A, A, wait until desired height is achieved, A (or B or C), PRO; then create Alt with PRO, ALT, Start

Joe Montana Sports Talk Football '93™

When you're playing on defense, B selects the defensive player closest to the ball and C is a jump or dive tackle. Putting these two moves together on B, and adding turbo, is very useful to your defense. The ALT function is used with this PRO THRASH. Don't forget to add Turbo!

PRO, B, B, C, PRO; then create Alt with PRO, ALT, Start

John Madden Football™ '93

This PRO THRASH is very similar to the one for "Joe Montana Sports Talk Football '93". It combines B (select defensive player closest to the ball) and C (clothesline tackle, strip the football, etc.). It also works on offense (spinning and breaking tackles) when the defense is coming from the sides and back. The ALT function is used with PRO THRASH. Remember to Turbo this move for the best results!

PRO, B, B, C, PRO; then create Alt with PRO, ALT, Start

King of the Monsters®

Here's a shortcut to jumping, since normally a player has to press A and B to jump.

PRO, Start, A+B, PRO

Lightning Force™

Firing all weapons at once is a very powerful application of PRO THRASH. In this game, you normally fire only one weapon at a time. When you press C, you cycle to the next weapon. This PRO THRASH lets you fire all the weapons at once and looks really cool. Even after you acquire extra/more weapons, this PRO THRASH works. If you apply Turbo to this combination move, you should reduce Turbo speed from the maximum. The ALT function is used with this PRO THRASH.

PRO, B, Hold B and fire once, while still holding B press C twice, PRO; then create

Midnight Resistance®

Sometimes it's useful to shoot forward at three angles at once. This PRO THRASH creates a continuous stream of bullets shooting in front of you and up. It's best when using the game's "Control Mode A" option and when the PRO THRASH is Turboed. The ALT function is used with PRO THRASH.

PRO, B, A, ▼+B, briefly release buttons (lets player stand backup), ▶ + ▲, ▲, briefly release buttons, PRO; then create Alt with PRO, ALT, Start

Mortal Kombat®

Creating a PRO THRASH that allows Scorpion to automatically throw the Van Dam Spear is just one of the useful applications of PRO THRASH to Mortal Kombat. The way to create this PRO THRASH is shown on page 27. Use the moves listed in your Mortal Kombat manual to create other pro thrashes.

Mutant League Football™

This PRO THRASH is very similar to the one for "Joe Montana Sports Talk Football '93". It combines B (select defensive player closest to the ball) and C (tackle, intercept, etc.). It also works on offense for spinning, punching, etc. The ALT function is used with this PRO THRASH. Remember to Turbo this move for best results!

PRO, B, B, C, PRO; then create Alt with PRO, ALT, Start

PGA Tour Golf I and II®

With POWER PLUG™ you can always hit the most effective tee-off shot. Remember, timing is crucial so it may take some practice to master and record this move. Once you have recorded the desired PRO THRASH tee-off, press the Reset button on the Genesis console and start a new game. The ALT function is used with this PRO THRASH.

PRO, B, hold B and release when desired strength level is achieved, B (starts downswing), press B again when perfectly straight shot is achieved, PRO; then create Alt with PRO, ALT, Start

Steel Empire™

Here's how to move forward and backward while continuously dropping bombs. This PRO THRASH lets you concentrate on moving forward without worrying as much if something is behind you. If you apply Turbo to this combination move, you should reduce Turbo speed from the maximum. The ALT function is used with this PRO THRASH.

PRO, C, C, B, PRO; then create Alt with PRO, ALT, Start

Streets of Rage 2™

There are many Streets of Rage special attacks that can be used in PRO THRASH... and here's one example: the Blitz Move. Each hero in Streets of Rage has a different Blitz Move, and they all use the same button sequence. So, this PRO THRASH works on any character, but results in a different attack for each. Note that this PRO THRASH recognizes your direction. The ALT function is used with this PRO THRASH.

Facing right...PRO, B, ▶, ▶, B, THRASH™, ▶; then create Alt with PRO, ALT, Start

Technoclash™

If you get in a dangerous position, sometimes you'll want to attack in multiple directions. This PRO THRASH should be turboed and adjusted slower to work properly. Also, the A button should be set at Turbo– it is especially effective for batting away enemy bullets! The ALT function is used with this PRO THRASH.

Facing right...PRO, A, A, ▶+▲, B, ▲, A, ▲+◀, B, ◀, A, ◀+▼, B, ▼, A, ▼+▶, B, PRO; then create Alt with PRO, ALT, Start

X-Men®

The Super High Jump is the most difficult X-Men move... and with the POWER PLUG you can make the jump button (C) always perform a Super High Jump. Once you've created this PRO THRASH, you can perform any spinning attack by pressing C twice. When you don't want to jump the maximum height, don't press C as long. And, Wolverine can eliminate three opponents with a single Super High Jump and Punch combination!

PRO, C, C twice quickly, PRO

How to move the function of a controller button

You can move the function of as many controller buttons as you want, whenever you want.

Press PRO to tell the POWER PLUG™ you want to move the function of a controller button.

Press the controller button you want to hold the function.

Press the controller button that normally holds the function.

Press PRO again to tell the POWER PLUG you are finished.

For example, in Sonic the Hedgehog 2® the B button makes Sonic jump into the air, but you would rather press Up to make Sonic jump. Do the following:

Press PRO to tell the POWER PLUG you want to move the function of a controller button.

Press Up to hold the jump.

Press B, the button that normally holds the jump.

Press PRO again to tell the POWER PLUG you are finished.

Now Sonic jumps into the air when you press the Up arrow.

COMBINING FEATURES

You can add Turbo and Auto to any THRASH™ or combination move created with PRO THRASH™. Try experimenting with different combinations on your own. Be creative and soon you'll discover many useful ways to combine features.

TURBO and THRASH™

Some thrashes already have a built-in Turbo setting and the TURBO light comes on when you use these. Adding Turbo to a THRASH may make the action too fast for the game– and prevent the THRASH from being completed. To reduce Turbo speed press and hold the controller button and repeatedly press SLOW. Watch the screen as you adjust the speed to see when your character performs best.

How to add Turbo to THRASH™

Press and hold the controller button that holds the THRASH.

\+

Press TURBO.

Now when you press and hold the button holding the THRASH, the THRASH will work at Turbo speed and the TURBO light will go on.

How to reduce Turbo speed

Press and hold the controller button that holds the THRASH.

\+

Repeatedly press SLOW until you get the speed you want. Each time you press SLOW, the POWER PLUG™ lights will blink a little slower.

How to remove Turbo

Press and hold the controller button that holds the THRASH.

\+

Press TURBO once.

Now when you press and hold the controller button holding the THRASH, the THRASH move will work at normal speed and the TURBO light will not go on.

TURBO and PRO THRASH™

You can add Turbo to any combination move you create with PRO THRASH. If your PRO THRASH is an attack move, it's usually a good idea to try adding Turbo.

How to add Turbo to a PRO THRASH

First, create the PRO THRASH you want and assign it to a controller button. Then do the following:

\+

Press and hold the controller button that holds the PRO THRASH and press TURBO.

Now when you press and hold the button holding the PRO THRASH, the combination move will work at Turbo speed and the TURBO light will go on.

Here's a very useful example for Street Fighter II™, that shows you how to make the stars go away when your character is dizzy.

Press PRO to tell POWER PLUG™ you want to create a combination move.

Press the A (jab) controller button.

Press the Right direction arrow. (first move)

Press the Left direction arrow. (last move)

Press PRO to tell POWER PLUG you are finished.

\+

Press and hold the A (jab) button and press TURBO.

Now, anytime your character is dizzy you can press the A (jab) button and the stars go away!

If you create a PRO THRASH that is an attack move, it's usually a good idea to try adding Turbo.

How to reduce Turbo speed

Sometimes adding Turbo to PRO THRASH may make the action too fast for the game and prevent the combination move from being completed. To reduce Turbo speed press and hold the controller

button and repeatedly press SLOW. Watch the screen as you adjust the speed to see when your character performs best.

Press and hold the controller button that holds the PRO THRASH™

\+

Repeatedly press SLOW until you get the speed you want. Each time you press SLOW, the POWER PLUG™ lights will blink a little slower.

How to remove Turbo from a PRO THRASH

Press and hold the controller button that holds the PRO THRASH™.

\+

Press TURBO once.

Now when you press and hold the controller button holding the PRO THRASH, the PRO THRASH move will work at normal speed and the TURBO light will not go on.

AUTO and THRASH™ or PRO THRASH™

You can add Auto to any THRASH or PRO THRASH. This is especially useful in games where you can THRASH and move at the same time.

How to add Auto to a THRASH or PRO THRASH

Press and hold the controller button that holds the THRASH or PRO THRASH.

\+

Press AUTO.

Now when you press the controller button the AUTO light will come on and the THRASH or PRO THRASH action will continue automatically. Each time you press the controller button the Auto feature will turn off or on.

How to remove Auto from THRASH or PRO THRASH

Press and hold the controller button that holds the PRO THRASH.

\+

Press AUTO.

Now, Auto is removed from your THRASH or PRO THRASH. The AUTO light will not go on when you press the controller button to activate the THRASH or PRO THRASH move.

CLONE

Clone changes any controller button into a POWER PLUG™ button. This is useful in games when a POWER PLUG feature needs to be turned on and off frequently. Clone will not work on RESET.

Whenever you change a controller button to a POWER PLUG function, you follow the same basic steps:

How to use Clone

Here's an example from Street Fighter II™ showing how you can make the A controller button become a PRO THRASH™ button.

Press PRO to tell the POWER PLUG to start cloning.

Press CLONE.

Press A (jab) to tell the POWER PLUG that this button will hold the cloned function.

Press PRO to tell the POWER PLUG which feature to clone.

Now, for example, when you want to create a combination move, you activate the PRO THRASH feature by pressing the A button. This is especially useful for creating a difficult combination move that may require several attempts to successfully record.

How to remove Clone

To remove the Clone feature from the controller button that holds the cloned function, press RESET once then press that controller button.

HAVING TROUBLE?

Self-Test: Anytime you want to make sure your POWER PLUG™ is working correctly, follow these self test steps.

- Make sure your Genesis™ Console is turned off and a game cartridge is in the Console.
- Press and hold the POWER PLUG RESET button and turn on your Genesis Console. After a short delay, all lights on the POWER PLUG should start flashing.
- Press each POWER PLUG button, including SLOW and TURBO and listen for the beeps. After you have pressed all the POWER PLUG buttons, the lights will stop flashing. This means that your POWER PLUG is operating correctly.

General Problem: Sometimes when you start a game it "freezes" or your controller stops working.

Solution: Make certain you have tight connections between your controller, POWER PLUG, and the Genesis Console. You may have to reset the Genesis Console if the connections were loose.

PRO THRASH™ Problem: The controller button that is supposed to hold the PRO THRASH combination move doesn't do the move when you press it.

Solution #1: A common mistake is to forget to press PRO at the end of a combination move. POWER PLUG continues recording until you press PRO the second time. Press RESET, then press the controller button that holds the PRO THRASH. Now try creating the PRO THRASH again.

Solution #2: Another mistake is to forget to press a controller button to hold the combination move. When this happens, the first button of your combination move will hold the PRO THRASH. Press RESET, then press the controller button that holds the PRO THRASH. Now try creating the PRO THRASH again.

PRO THRASH™ Problem: The POWER PLUG™ suddenly beeps several times while you are creating a combination move.

Solution: The POWER PLUG has run out of memory. The PRO light will go out and the POWER PLUG will hold the move you have recorded up to that point. You can keep this move or start over by resetting the button and recording a shorter combination move. (maximum 17 button presses.)

THRASH™ Problem: In *Street Fighter II™* your THRASH for Blanka's Rolling Attack, or a similar directional move, doesn't always work.

Solution: Some of the *Street Fighter II™* thrashes require that you tell the POWER PLUG which direction your character is facing. For these thrashes, always tap the control pad in the direction your character is facing before using the THRASH.

THRASH™ Problem: In *Street Fighter II™*, Ryu and Ken don't always throw a fireball when they are supposed too.

Solution #1: Ryu and Ken can throw only one fireball at a time. If they throw a second fireball before the first fireball hits the opponent or goes off the screen, the second fireball will be a Dragon Punch. Remember, throw only one fireball at a time.

Solution #2: If you don't hold down the THRASH button throughout the entire move, the THRASH will quit too early and cause Ryu or Ken to do something else.

Turbo Combination Problem: You just tried using Turbo with a THRASH™ or PRO THRASH™ and the move didn't work.

Solution: Adding Turbo to THRASH or PRO THRASH may make the action too fast. *See pages 34 and 35 for instructions on How to reduce Turbo speed.*

General Problem: Your controller suddenly lost all the POWER PLUG™ settings.

Solution: You probably accidentally pressed RESET twice when you meant to Reset a single controller button. Unfortunately, now you must define all your controller setting again. *See page 14 on How to use Reset.*

General Problem: You're having difficulty playing a game that uses the six button controller.

Solution: There is a special installation procedure you must follow when you are playing a game designed for a six button controller **and** you are playing in the game's six button controller mode. Press and hold Auto and turn on the Genesis™ Console.

If you have any comments or questions about your POWER PLUG™, please call us toll-free at

1-800-FOR-TYCO
1-800-367-8926

THRASH Guide to Streets of Rage 2™

Move	THRASH		Attack buttons
Axel			
Grand Upper	#1	• • • • •	B
Backhand Punch	#1	• • • • •	B+C (together)
Blaze			
Vertical Slash	#1	• • • • •	B
360° Foot Sweep	#1	• • • • •	B+C (together)
Max			
Power Slide	#1	• • • • •	B
Mule Kick	#1	• • • • •	B+C (together)
Skate			
Super Dash/ Dynamite Head Butt	#1	• • • • •	B
Backflip Kick	#1	• • • • •	B+C (together)

NOTES

NOTES

QUICK REFERENCE

TURBO

AUTO

RESET

POWER STEERING

THRASH™

ALT

PRO THRASH™

CLONE

THRASH™ lets you assign one of the combination moves already stored in the POWER PLUG™ to one of your controller buttons. Then you can launch special attacks, like the ones in Street Fighter II™, when you press just one controller button! *See page 16*

AUTO allows any controller button to stay on for continuous action *See page 10*

POWER STEERING gives you smooth control for precise maneuvering. Power Steering is especially useful in driving, flying and sports games. *See page 15*

SLOW use this feature for Slow Motion. *See page 12*

ALT allows you to switch back and forth between the normal function of a button and its Power Plug settings. *See page 22*

TURBO speeds up any controller button to the fastest rate possible *See page 8*

PRO THRASH™ lets you record your own personal combination of moves and assign them to a single controller button. Then you can replay that combination of moves when you press just one controller button! *See page 24*

RESET allows you to return a single controller button to it's normal setting. Or you can reset all the controller buttons to their normal setting. *See page 14*

CLONE transforms any controller button into a POWER PLUG™ button. Clone is useful when you need to turn a POWER PLUG feature (like Turbo) on and off frequently. *See page 37*

INSTALLING THE POWER PLUG™

Setting up the POWER PLUG is easy. **First, make sure the GENESIS™ CONSOLE is turned off.** Plug the POWER PLUG into either controller port #1 or #2— you can even use two POWER PLUGS at the same time. Then plug your favorite Genesis controller into the POWER PLUG.

IMPORTANT PLEASE TURN OFF GENESIS CONSOLE BEFORE CONNECTING THE POWER PLUG

When you turn on your Genesis Console, the POWER PLUG will beep four times—one long and three short beeps—telling you that it's ready to use. If you have a problem, refer to self-test instructions on page 38.

When you reset the Genesis Console, POWER PLUG remembers any custom settings you have made. However, each time you turn off the power to the Genesis Console you'll need to reprogram your custom settings.

USING THE SIX BUTTON CONTROLLER

The instructions in this manual apply equally to the three button controller and the six button controller. Many of the advanced POWER PLUG™ features are especially easy to use if you have a six button controller.

When using the six button controller with games designed for six button play, the start up procedure is as follows:



Press and hold Auto and turn on Genesis™ Console

Using other combinations:

- Six button controller/games designed for three button controller
- Three button controller/games designed for three button controller
- Three button controller/games designed for six button controller

Reference standard installation instructions as described on page 6.

Using other devices that plug into Genesis™

The POWER PLUG works with the Sega™ CD-Rom drive, Sega™ VR system, Sega™ Activator and any Genesis™ device that works with, or acts like, a standard Genesis controller. However, the POWER PLUG will not work with the Sega™ Menacer targeting device.

When using two POWER PLUGS with six button controllers and six button games, both players must press and hold AUTO when the control deck is turned on.

When using the six button controller with games designed for three button play the extra controller buttons can be used to hold POWER PLUG features.

TURBO

Turbo speeds up any controller button function. Turbo is especially useful in fighting games where you want a character to rapidly throw punches or you want to increase the firing speed of your weapons.

When you activate Turbo for a controller button, the Turbo rate automatically goes to the maximum speed.

How to use Turbo

Decide which controller button you want to speed up with Turbo, usually this is the shoot or punch button. Press and hold that controller button and at the same time press TURBO. Now the controller button you chose will work at Turbo speed!

1. Press and hold any controller button and press TURBO once.
2. While holding the controller button, press here repeatedly if you want to slow down the Turbo speed.

When you want to make a change, like adding Turbo to a controller button, it's often easier to pause the game first and then resume the game after you've made the change.

Turbo examples

Here's an example from Street Fighter II™ that shows how to add Turbo at the maximum setting to one of Ryu's attacks. First select Ryu in either 1- or 2-player mode. After Ryu is ready for battle, follow these steps:

A + TURBO — Press and hold A (jab or short) and press TURBO. Now Ryu will perform either his short kick or jab at incredible speeds!

C + TURBO — Press and hold C (fierce or roundhouse) and press TURBO for Ryu's fastest roundhouse kick or fierce punch. Notice that this attack is slower than others because it is more powerful.

Now when you press A or C, the moves will perform at maximum speed and the TURBO light will blink.

How to adjust the Turbo speed

Adding TURBO to a move may make the action too fast for the game to respond. To reduce Turbo speed, press and hold the controller button and repeatedly press SLOW.

This example from *Street Fighter II™* shows how to vary the Turbo speed of Ryu's jab. First select Ryu in either 1- or 2-player mode. After Ryu is ready for battle, follow these steps:

B + TURBO — Press and hold B and press TURBO for Ryu's fastest punch or kick.

B + SLOW — Press and hold B and press SLOW several times. Notice that Ryu's attack becomes slower and slower, and the TURBO light blinks slower too.

You can vary the Turbo speed of as many different controller buttons as you want! If you change your mind and want to speed up the Turbo rate, remove Turbo *(see below)* and start again at the maximum speed.

How to remove Turbo

You can remove Turbo from a controller button by holding down that button and pressing TURBO. Now when you press that button, it will work normally and the TURBO light will not blink.

SEGA GENESIS

POWER PLUG™

MAKE ANY GENESIS™ CONTROLLER THE ULTIMATE WEAPON!

OFFICIAL SEGA SEAL OF QUALITY

TYCO

FEATURES:

•THRASH™ •PRO THRASH™ •POWER STEERING
•AUTO FIRE •VARIABLE TURBO •CLONE

Licensed by Sega Enterprises Ltd. for use with the SEGA™ GENESIS™ system

TYCO

POWER PLUG™

MAKE ANY GENESIS™ CONTROLLER THE ULTIMATE WEAPON!

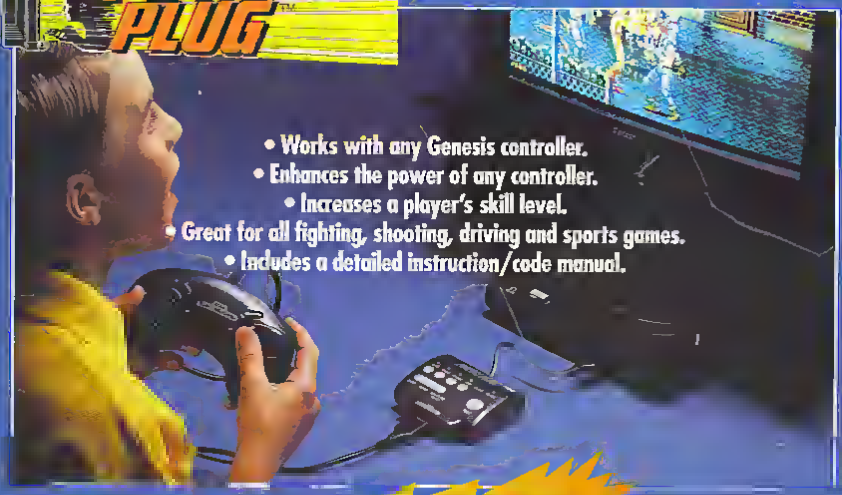

- Works with any Genesis controller.
- Enhances the power of any controller.
- Increases a player's skill level.
- Great for all fighting, shooting, driving and sports games.
- Includes a detailed instruction/code manual.

FEATURES

POWER STEERING

Now you have incredibly smooth directional control, unlike anything you've experienced in a video game before.

AUTO FIRE

Enables any controller button to stay on for continuous firing action, and can be overlayed on Thrash and Pro Thrash moves.

VARIABLE TURBO

Automatically Turbos any controller button to the maximum speed available. Features Slow Mo, any speed in between, and can be overlayed on Thrash and Pro Thrash moves.

THRASH™

Now you can select preprogrammed special moves for many of the more complex fighting games. For example in Street Fighter II, RYU'S FIREBALL can now be activated at the touch of one button instead of the usual four.

PRO THRASH™

Now you have the flexibility to create and save your own complex attacks in one button

CLONE

Transforms any controller button into a power plug button.

Power Plug designed by Pure Imagination.

Proof-of-Purchase

0 43302 01276 0

TOLL-FREE 800 NUMBER
for information and assistance

90 DAY LIMITED WARRANTY
Copy of completed text is enclosed

97-0-136
Made in China. Printed in China.

OFFICIAL SEGA SEAL OF QUALITY

Licensed by Sega Enterprises for use with the SEGA™ Genesis™ System

Power Plug, Thrash and Pro Thrash are trademarks of Tyco Industries, Inc. ©1993 Tyco Industries, Inc, Mount Laurel NJ 08054 All rights reserved. Patent Pending. Street Fighter II and RYU are registered trademarks of Capcom USA Inc.

SEGA AND GENESIS ARE TRADEMARKS OF SEGA ENTERPRISES LTD.

PLACE STAMP HERE

SAVE THIS CARD

Please keep sales receipt and owner's manual with this card. For service, do not return the Power Plug™ to the store where purchased, contact our Customer Service Department. Address and TOLL-FREE number are on the other side of card.

TYCO POWER PLUG
Customer Service Dept.
P.O.Box 888
Portland, OR 97207

P978-631

POWER PLUG™ WARRANTY REGISTRATION

TYCO WANTS TO HELP YOU...
At Tyco, we are continually striving to please our customers by making quality products that satisfy their needs and interests. As a Customer your opinion is very important to us. Please take the time to fill out this brief questionnaire, which help us better serve you.

Thank you for your help.

Name _____

Street Address _____

City _____ **State** _____ **Zip** _____

Phone ( ) _____ **Date of Purchase** _____

Age:

❑ Under 10 ❑ 10-14 ❑ 15-19 ❑ 20-24

❑ 25-29 ❑ 30-34 ❑ 35-39 ❑ 40+

❑ Male ❑ Female

At what kind of store was purchase made?

❑ Toy Store ❑ Discount ❑ Software ❑ Department

❑ Electronics ❑ Audio/Video ❑ Other _____

Which one of the following most influenced your decision to buy or request the Power Plug?

❑ Tyco name ❑ Newspaper/Magazine Ad

❑ "Package caught my eye" ❑ A television commercial

❑ A friend ❑ Other _____

POWER PLUG™

90 - DAY LIMITED WARRANTY

All Tyco products are inspected and tested before shipment and are guaranteed to be free from factory defects in materials and workmanship. If you find a defective part in your set within 90 days from the date of purchase, mail the product, along with proof of the date of purchase to:

Tyco Customer Service
8585 SW Hall Blvd.
Beaverton, OR 97005

We will repair or provide a replacement part or unit without charge. Please allow sufficient time for the Post Office to get the item to us, and for the item to be mailed to you. To prevent damage in transit, please pack securely. This warranty does not cover damage resulting from customer damage or abuse. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

If you have any comments or questions about your POWER PLUG™, please call us toll-free at:

1-800-FOR-TYCO
1-800-367-8926

© 1993 TYCO Industries Inc. Mt. Laurel, N.J. 08054 Printed in Hong Kong

QUICK REFERENCE

THRASH™

TYCO

POWER PLUG™

THRASH is a special combination move already contained in the POWER PLUG™and lets you put that combination move into a single button! For instance, in Street Fighter II™ it takes four moves to make Ryu throw a fireball. With Thrash you can throw a fireball by pushing just one button! Thrashes are used for fighting games such as *Street Fighter II™*, *Streets of Rage 2™*, Battletoads™, Universal Soldier™, Turtles The Hyperstone Heist™, Mercs™, Technoclash™, Cool Spot™, X-Men®, and Batman™ Returns. (see pages 18-21 in the manual)

How to use THRASH

Press THRASH button one or more times to select the THRASH you want. Notice that the lights are used to count in sequence from left to right. For example, if you want THRASH #5, press the THRASH button five times. The lights on the POWER PLUG will help you keep track of which THRASH you are selecting.

Press any controller button you want to hold the THRASH. The THRASH light will begin blinking. Usually it's best to hold the THRASH in a button that is rarely, if ever, used.

Press an attack button, such as a shoot, punch, or kick, to complete the THRASH. The THRASH light will go off. You can even press two or three attack buttons at once!

When you want a character to do a THRASH, you must hold down the controller button that contains the THRASH all the way through the end of the move.

PRO THRASH™

PRO THRASH will record any combination of moves you make, and then save them in a single controller button. This is similar to THRASH, only here you create your own combination move. PRO THRASH is the most flexible and powerful POWER PLUG feature so it's useful for all types of games. For example, if you want to press one controller button to have your game character move right, jump (where B is the jump button), move left twice, and jump again, and end up facing right, do the following:

Press PRO to tell the POWER PLUG you want to record a PRO THRASH.

Press B, which is the button that will hold the PRO THRASH.

Enter the combination you want recorded:

Press PRO to tell the POWER PLUG you are done.

Now when you press and hold B, your character will do the move just recorded– move right, jump, move left twice, jump and turn right.

If the POWER PLUG beeps several times while recording a PRO THRASH, the POWER PLUG has run out of memory. Try resetting the button or recording a shorter PRO THRASH (maximum 17 button presses).

POWER PLUG records your moves exactly as you enter them–including the time between moves. Make sure you enter your moves as quickly as you would normally play them, otherwise your combination moves may run too slowly during game play. If the move is still too slow try adding TURBO.

The titles or names of the individual games noted are trademarks of the respective owners, and are not affiliated in any way with Tyco Industries, Inc.
©1993 Tyco Industries Inc., Mt. Laurel, NJ 08054 Printed in Hong Kong 7827703

QUICK REFERENCE
continued

TURBO

Turbo speeds up any controller button function. Turbo is especially useful in fighting games where you want a character to rapidly throw punches or you want to increase the firing speed of your weapons.

When you activate Turbo for a controller button, the Turbo rate automatically goes to the maximum speed.

How to use Turbo

Decide which controller button you want to speed up with Turbo, usually this is the shoot or punch button. Press and hold that controller button and at the same time press TURBO. Now the controller button you chose will work at Turbo speed!

Press and hold any controller button and press TURBO once.

How to adjust the Turbo speed

Adding TURBO to a move may make the action too fast for the game to respond. To reduce Turbo speed press and hold the controller button and repeatedly press SLOW.



While holding the controller button, press SLOW repeatedly if you want to slow down the Turbo speed.

AUTO

Auto allows any controller button to stay on for continuous action, such as uninterrupted vehicle acceleration, character movement, weapons fire, punches, kicks, etc. This is useful when you get tired of pressing a button for long periods of time.

How to use Auto

Press and hold any controller button and press AUTO. The AUTO light turns on whenever the Auto feature is active.

Press and hold any controller button and press AUTO to add the Auto feature. Repeat to remove the Auto feature.

Turbo may have to be added to single function action buttons (such as kick, punch, jump, throw, or shoot) before the Auto feature is added in order to achieve continuous action.

RESET

Use Reset to undo changes you've made to controller buttons. You can change a single controller button back to it's original setting, or you can reset all controller buttons at the same time.

How to reset a *single* controller button

Press the RESET button once– all the lights will flash.

Press the controller button to tell POWER PLUG™ which button will be reset.

This will undo any POWER PLUG action (Turbo, Auto, Clone, THRASH™, and PRO THRASH™) and will return the controller button to its original setting.

How to reset *all* controller buttons

Press the RESET button once– all the lights will flash.

Press RESET again to tell POWER PLUG to reset all controller buttons.

This will reset all controller buttons at the same time; only Power Steering will stay on.